

WOLFINSTEEL FIXINGS


The standard Wolfinsteel fixings are Hilti nylon anchors at 150 centres. If the structure is timber / FC sheet / plywood, the essential difference is only in the fixings, which will be suitable posidrive screws in lieu.

INSULATION (WHERE USED)

Where a soft substrate (insulation, lightweight concrete) exists below any existing membrane, WMA will advise the fixings to be employed.

FLASHINGS

The P5 detail is to be used whether there are existing flashings/cappings or not. Where flashings exist, bend them out of the way, fit the P5 minimum 25mm below and redress the existing flashing down.

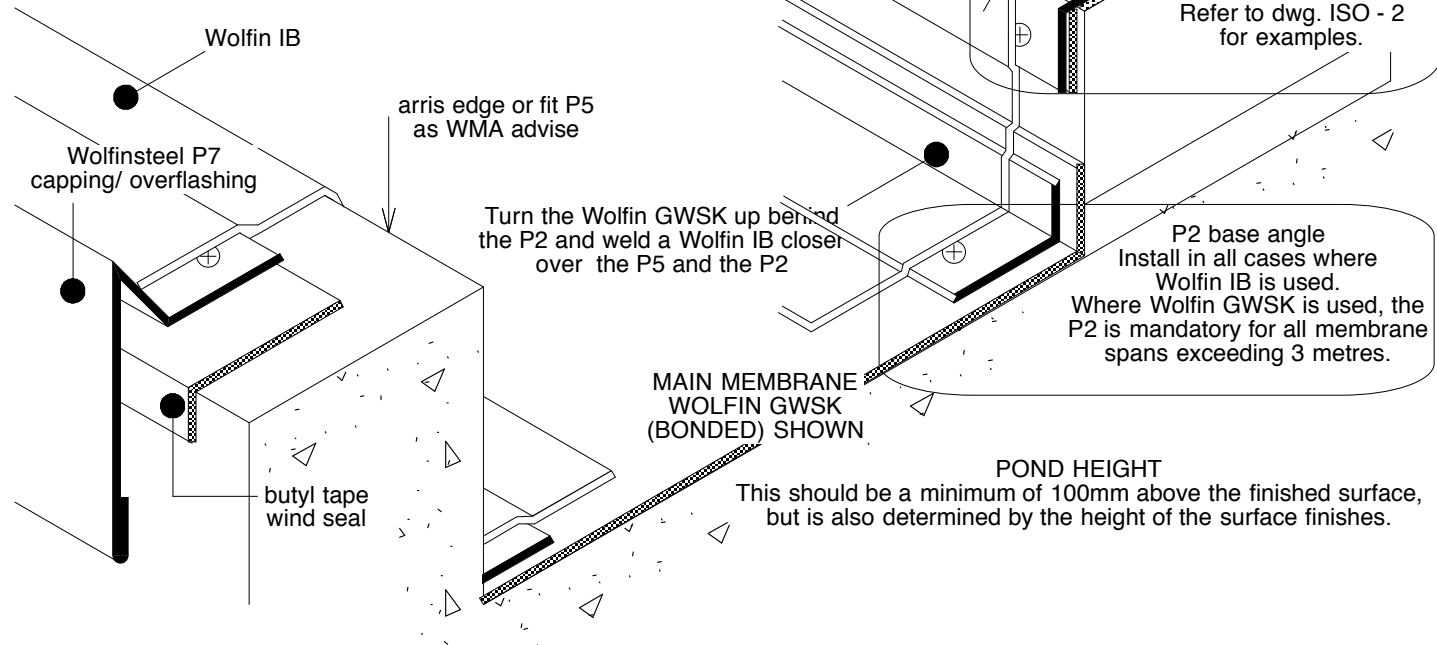

The designs and details shown herein are copyright and may not be used for any purpose other than Wolfin detailing without the written permission of Wolfin Membranes Australia Pty Ltd

WOLFIN MEMBRANES AUSTRALIA - CONCEPT/SHOP DWG.

TYPICAL TERMINATIONS
WALL (P5) AND PARAPET (P7)
New or retrofit to concrete or masonry

SCALE: 1:2

DATE: 18/06/13

DWG. No: ISO-1